

NINJA® Foodi™

**POWER NUTRI™
BLENDER 3-IN-1**

CB350UK

Series

INSTRUCTIONS



THANK YOU

for purchasing the Ninja® Foodi® Power Nutri™ Blender 3-in-1



REGISTER YOUR PURCHASE

 ninjakitchen.co.uk/register-guarantee

 Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~, 50-60Hz

Power: 1200 Watts

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.

PRODUCT REGISTRATION

Please visit registeryourninja.co.uk or call 0800 862 0453 to register your new Ninja® product within 28 days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

CONTENTS

Important Safety Instructions	4
Parts	8
Before First Use	9
Getting to know the Power Nutri™ Bowl.....	9
Using the Control Panel	10
Using the Total Speed Control	10
Using the Auto-iQ® Programs	11
Using the Jug & Stacked Blade Assembly	12
Using the Jug & Dough Blade Assembly	14
Using the Power Nutri™ Bowl	16
Using the Power Nutri™ Cup	18
Care & Maintenance	20
Cleaning Stuck-On Ingredients.....	20
Cleaning.....	21
Storing.....	21
Resetting the Motor.....	21
Ordering Replacement Parts.....	21
Troubleshooting Guide	22

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠ WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- 1 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 2 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 3 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 4 Blades are sharp. Handle carefully.
- 5 This product is provided with a Stacked Blade Assembly. **ALWAYS** exercise care when handling blade assemblies. The blade assemblies are sharp and are **NOT** locked in place in their containers. The blade assemblies are designed to be removable to facilitate cleaning

and replacement if needed. **ONLY** grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assemblies will result in a risk of laceration.

- 6 **ALWAYS** exercise care when handling the Hybrid Edge™ Blades Assembly. The blades are sharp. **ONLY** grasp the Hybrid Edge Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
- 7 Turn the appliance **OFF**, then unplug the appliance from the socket when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug by the body and pull from the socket. **NEVER** unplug by grasping and pulling the flexible cord.
- 8 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.

- 9 Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 10 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 11 **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
- 12 This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
- 13 Extension cords should **NOT** be used with this appliance.
- 14 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 15 **DO NOT** allow the unit or the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.

- 16 **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 17 **ALWAYS** use the appliance on a dry and level surface.
- 18 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 19 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 20 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 21 **NEVER** place a blade assembly on the motor base without it first being attached to its corresponding container (jug, cup or bowl) with the lid also in place.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

⚠ WARNING

- 22** Keep hands, hair and clothing out of the container when loading and operating.
- 23** During operation and handling of the appliance, avoid contact with moving parts.
- 24 DO NOT** fill containers past the **MAX FILL** or **MAX LIQUID** lines.
- 25 DO NOT** operate the appliance with an empty container.
- 26 DO NOT** microwave any containers or accessories provided with the appliance.
- 27 NEVER** leave the appliance unattended while in use.
- 28 DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 29 DO NOT** process dry ingredients without adding liquid to the Power Nutri™ Cup, Power Nutri™ Bowl or Jug. They are not intended for dry blending.
- 30 DO NOT** use for grinding ingredients.
- 31 NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 32** Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 33** Keep hands and utensils out of containers while chopping to reduce the risk of severe personal injury or damage to the blender/food chopper. A scraper may be used **ONLY** when the blender or processor is not running.
- 34** If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly and use a scraper to dislodge ingredients.
- 35 DO NOT** open the jug's pour spout cap while blender is operating.
- 36** If you find unmixed ingredients sticking to the sides of the jug, stop the appliance, remove the lid and use a spatula to dislodge ingredients. **NEVER** insert your hands into the jug, as you may contact one of the blades and experience a laceration.
- 37 DO NOT** attempt to remove the container or lids from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.

- 38** If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- 39 DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 40** Upon completion of processing, ensure the blade assembly is removed **BEFORE** emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- 41** If using the jug's pour spout, hold the cover in place on the container or ensure lid lock is engaged when pouring to avoid risk of injury.
- 42** Remove the Hybrid Edge™ Blades Assembly from the Power Nutri™ Cup or Power Nutri™ Bowl upon completion of blending. **DO NOT** store ingredients before or after blending them in the cup or bowl with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Spout

Lid or Storage Lid to cover. For ingredient storage in the bowl, use only Spout Lid or Storage Lid.

- 43** The maximum wattage rating for this appliance is based on the configuration of the Hybrid Edge Blades Assembly and Power Nutri™ Cup. Other configurations may draw less power or current.
- 44 DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 45 DO NOT** attempt to sharpen blades.
- 46** Turn off the appliance and unplug the motor base before cleaning.

SAVE THESE INSTRUCTIONS

PARTS

There are a variety of accessories that are compatible with this blender series.



NOTE: The top flap of your box shows the select accessories that are included with your model.

To purchase more accessories, visit ninjakitchen.co.uk.

PARTS

- A** Jug Lid
- B** 2.1L* Power Nutri™ Jug
- C** Motor Base
(attached power cord not shown)
- D** Total Crushing® & Chopping Blade Assembly (Stacked Blade Assembly)
- E** Dough Blade Assembly
- F** Hybrid Edge™ Blades Assembly
- G** Spout Lid
- H** 700ml Power Nutri™ Cup
- I** Storage Lid
- J** 400ml Power Nutri™ Bowl
- K** Cleaning Brush

*1.8L max liquid capacity.

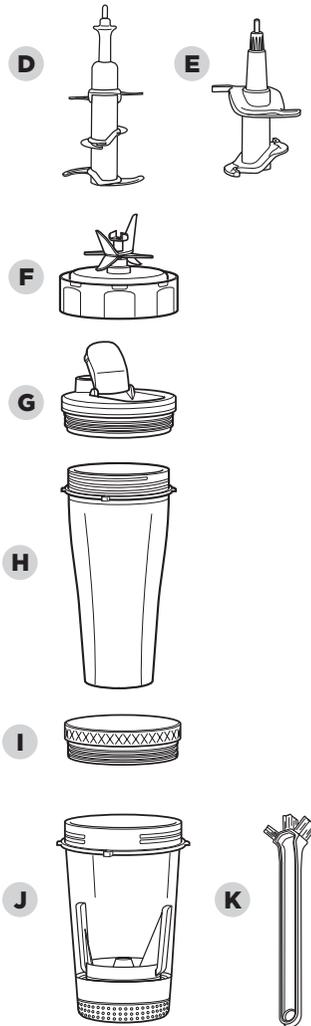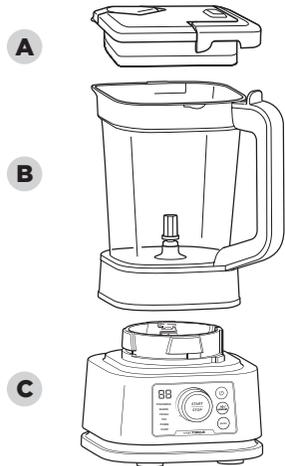

NOTE: The Hybrid Edge Blades Assembly is not compatible with other Ninja products.

NOTE: Number of cups, bowls and lids vary by model.

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-7 before proceeding.

DID YOU KNOW?


- You can take your drinks on the go using the spout lid.

NOTE: All attachments are BPA free and dishwasher safe. Ensure blade assemblies and lids are removed from the containers before placing in the dishwasher. Exercise care when handling blade assemblies.

- 1** Remove all packaging materials from the unit. Exercise care when unpacking blade assemblies, as the blades are sharp.
- 2** The Stacked Blade Assembly is **NOT** locked in place in the container. Handle the Stacked Blade Assembly and Dough Blade Assembly by grasping the top of the shaft.
- 3** Handle the Hybrid Edge™ Blades Assembly by grasping around the perimeter of the blade assembly base.
- 4** Wash containers, lids and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are sharp.
- 5** Thoroughly rinse and air-dry all parts.

NOTE: Place the motor base on a smooth, clean and level surface. Do not place motor base on a rough or unlevel surface as the suction cup feet will not adhere properly.

GETTING TO KNOW THE POWER NUTRI™ BOWL

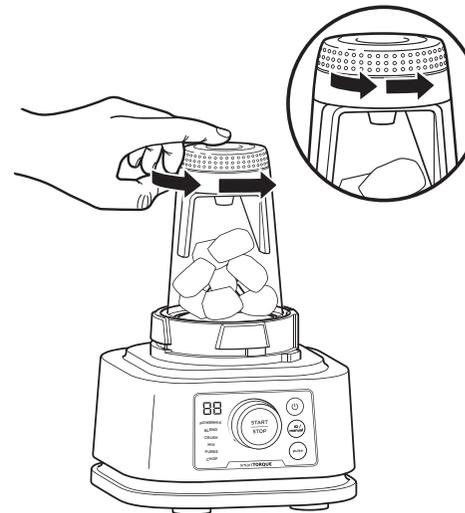

Powering through tough and frozen ingredients used to require a lot of stopping, scraping and recipe tinkering. But now, it's easier than ever to create thick and spoonable smoothie bowls, nut butters and more.

All you have to do is twist the Power Paddle while blending to push ingredients down towards the blade. It's like having a built-in tamper.

USING THE CONTROL PANEL

🔌 Use the Power button to turn the unit on or off.

SWITCHING BETWEEN AUTO-IQ® AND MANUAL MODE:

To toggle between Auto-iQ Mode and Manual Mode, press the IQ/MANUAL button.

NOTE: In Manual Mode, Auto-iQ programs will not illuminate on the control panel.

AUTO-IQ MODE

6 unique timed programs customised to take the guesswork out of making great drinks and meals.

MANUAL MODE

Choose from 10 different speeds for total control of your blending. Continuously runs up to 60 seconds. Press START/STOP at any time to end program sooner.

NOTE: Only speed 10 is available when using the Power Nutri™ Bowl or Cup.



SELECT AND RUN AN AUTO-IQ PROGRAM

Use the dial to select the desired program, then press START/STOP to begin. As the program runs, the timer will count down. When the countdown ends, blending will stop automatically.

SELECT AND RUN A MANUAL PROGRAM

Turn the dial from speed 1 to speed 10. Press START/STOP to begin and end blending.

PULSE

Offers greater control of pulsing and blending. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

USING TOTAL SPEED CONTROL & THE JUG

NOTE: If using the Dough Blade Assembly, only use speeds 1 or 2.

START SLOW

Always start at a low speed (1-3) to better incorporate ingredients and prevent them from sticking to the side of the vessel.

DIAL UP THE SPEED

Smoother blends call for higher speeds. Low speeds are great for chopping vegetables and mixing dough, but you'll need to ramp up for purees and dressings.

HIGH-SPEED BLENDING

Blend until you get your desired consistency. The longer you blend, the better the breakdown and smoother the outcome will be.

USING THE AUTO-IQ® PROGRAMS

AUTO-IQ PROGRAMS

Intelligent preset programs combine unique blending and pausing patterns that do the work for you. Once a preset program is selected, it will start immediately and automatically stop when blending is complete. To stop blending before the end of the program, press the currently active button again.

NOTE: The unit can detect if the jug or the cup/bowl is installed on the motor base. Only the programs available for a particular container will illuminate on the control panel.



AUTO-IQ PROGRAMS FOR THE POWER NUTRI™ JUG

BLEND

Combine your favourite fresh or frozen ingredients to make smoothies, milkshakes or protein shakes to share.

CRUSH

Designed to handle the toughest ingredients like nuts, seeds and even ice to make drinks to share, from super healthy smoothies to cocktails.

MIX

Make thick bases for smoothie bowls or creamy frozen yogurts.

PUREE

Blend anything that requires a smooth texture, from dressings to houmous to sauces.

CHOP

Timed pulses and pauses give you consistent chopping results. Run program once for a large chop, twice for a small chop and three times for a finer chop.

AUTO-IQ PROGRAMS FOR THE POWER NUTRI™ CUP AND POWER NUTRI™ BOWL

BLEND

Combine your favourite fresh or frozen ingredients to make smoothies, milkshakes or protein shakes.

CRUSH

Designed to handle the toughest ingredients like nuts, seeds and even ice to make drinks, from super healthy smoothies to cocktails.

NOTE: For best results when using the Power Nutri™ Cup, use the Auto-iQ Programs, BLEND & CRUSH.

POWERMIX

Create anything from spreadable peanut butter to the perfect houmous or even pâtés.

MIX

Make thick bases for smoothie bowls or creamy frozen yogurts.

NOTE: For best results when using the Power Nutri™ Bowl, use the Auto-iQ Programs, MIX & POWERMIX.

USING THE JUG & STACKED BLADE ASSEMBLY

IMPORTANT: Review all warnings on pages 4-7 before proceeding.

IMPORTANT: As a safety feature, when the unit is powered on, if the jug and lid are not properly installed, the timer will display "--" and the motor will be disabled. If this happens, repeat step 5 on the following page. When the jug and lid are properly installed and the unit is powered on, the program button LEDs will illuminate, indicating the appliance is ready to use.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.

NOTE: DO NOT add ingredients before completing installation of the Stacked Blade Assembly.

NOTE: If the Stacked Blade Assembly is not fully seated, you will not be able to install and lock the lid.

NOTE: The jug lid handle will not fold down unless it is attached to the jug.

- 1 Plug in motor base and place on a clean, dry, smooth, level surface such as a worktop or table.



- 2 Lower the Jug onto the motor base. The handle should be aligned slightly to the right and the jug should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the jug clockwise until it clicks into place.



- 3 Exercising care, grasp the Stacked Blade Assembly by the top of the shaft and place it onto the drive gear inside the jug. Note that the blade assembly will fit loosely onto the drive gear.
- 4 Add ingredients to the jug. **DO NOT** add ingredients past the **MAX LIQUID** line on the jug.




- 5 Place the lid on the jug. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




- 6a If using an Auto-iQ® program, use the dial to select the program that best suits your desired output, then press **START/STOP**. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press **START/STOP**.
- 6b For Manual mode, press **IQ/MANUAL**. Use the dial to select your desired speed, ranging from 1 to 10 and press **START/STOP**. Once the ingredients have reached your desired consistency, press **START/STOP** and wait for the unit to come to a complete stop.




- 7 Remove the jug from the motor base by turning it anti-clockwise and then lifting up.

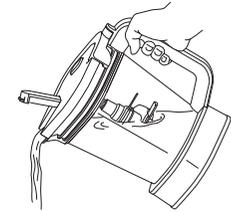

- 8a To pour out thinner mixtures, ensure the lid is locked in place, then open the pour spout cap.

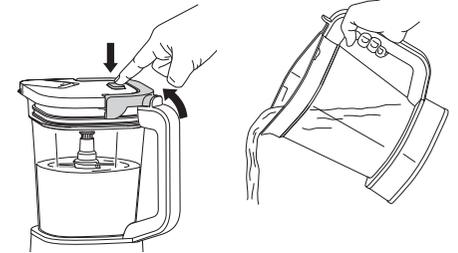

- 8b For thicker mixtures that cannot be emptied through the pour spout, remove the lid and Stacked Blade Assembly before pouring. To remove the lid, press the **RELEASE** button and lift the handle. To remove the blade assembly, carefully grasp it by the top of the shaft and pull straight up. The jug can then be emptied.

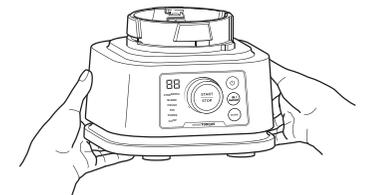

- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE JUG & DOUGH BLADE ASSEMBLY

IMPORTANT: Review all warnings on pages 4-7 before proceeding.

IMPORTANT: As a safety feature, when the unit is powered on, if the jug and lid are not properly installed, the timer will display "--" and the motor will be disabled. If this happens, repeat step 5 on the following page. When the jug and lid are properly installed and the unit is powered on, the program button LEDs will illuminate, indicating the appliance is ready to use.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.

NOTE: DO NOT add ingredients before completing installation of the Dough Blade Assembly.

NOTE: If the Dough Blade Assembly is not fully seated, you will not be able to install and lock the lid.

NOTE: The jug lid handle will not fold down unless it is attached to the jug.

- 1 Plug in motor base and place on a clean, dry, smooth, level surface such as a worktop or table.



- 2 Lower the Jug onto the motor base. The handle should be aligned slightly to the right and the jug should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the jug clockwise until it clicks into place.



- 3 Exercising care, grasp the Dough Blade Assembly by the top of the shaft and place it onto the drive gear inside the jug. Note that the blade assembly will fit loosely onto the drive gear.



- 4 Add ingredients to the jug. **DO NOT** add ingredients past the **DOUGH MAX** or **COOKIE MAX** line on the jug.



- 5 Place the lid on the jug. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




- 6 Press IQ/Manual. Use the dial to select speeds 1 or 2, then press START/STOP. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

IMPORTANT: Only use speeds 1 or 2 when using the Dough Blade Assembly.



- 7 Remove the jug from the motor base by turning it anti-clockwise and then lifting up.

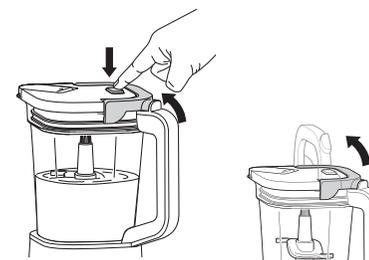

- 8 Remove the lid and Dough Blade Assembly before removing contents. To remove the lid, press the **RELEASE** button and lift the handle. To remove the blade assembly, carefully grasp it by the top of the shaft and pull straight up. The jug can then be emptied.



- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE POWER NUTRI™ BOWL

IMPORTANT: Review all warnings on pages 4-7 before proceeding.

NOTE: If the unit is plugged in and powered on, but the bowl and blade assembly is not properly installed, the timer will display "--" and the motor will be disabled.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.


- 1 Plug in motor base and place on a clean, dry, smooth, level surface such as a worktop or table.



- 2 Add ingredients to the Power Nutri™ Bowl. **DO NOT** add liquid past the **LIQUID FILL** line or ingredients past the **MAX FILL** line.



- 3 Place the Hybrid Edge™ Blades Assembly on the top of the bowl and turn clockwise to seal.

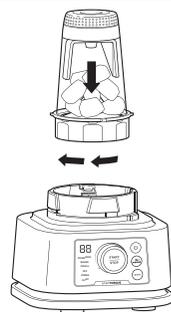

- 4 Turn the bowl upside down and install on motor base by aligning the tabs on the bowl with the slots on the base. Then, rotate bowl clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




NOTE: While processing, twist the Power Paddle *anti-clockwise* continuously.

- 5a If using an Auto-iQ program, use the dial select the program that best suits your desired output, then press START/STOP. During the blending process, ensure to twist the Power Paddle **anti-clockwise** continuously. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

- 5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. During the blending process, twist the Power Paddle **anti-clockwise** continuously. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

NOTE: Only speed 10 is available when using the Power Nutri™ Bowl.

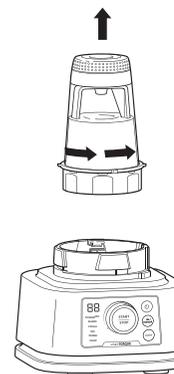

- 6 Remove the bowl from the motor base by turning it anti-clockwise and then lifting up.



- 7 Remove the blade assembly by twisting anti-clockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the Spout Lid or Storage Lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



- 8 To enjoy on the go, place the Spout Lid or Storage Lid onto the bowl and twist clockwise until firmly sealed.



- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE POWER NUTRI™ CUP

IMPORTANT: Review all warnings on pages 4-7 before proceeding.

NOTE: If the unit is plugged in and powered on, but the cup and blade assembly is not properly installed, the timer will display “- -” and the motor will be disabled.

NOTE: Auto-iQ® programs have pauses and changes in speed throughout the cycle.


- 1 Plug in motor base and place on a clean, dry, smooth, level surface such as a worktop or table.




- 2 Add liquid then ingredients to the Power Nutri™ Cup. **DO NOT** add ingredients past the **MAX LIQUID** line.



- 3 Place the Hybrid Edge™ Blades Assembly on the top of the cup and turn clockwise to seal.

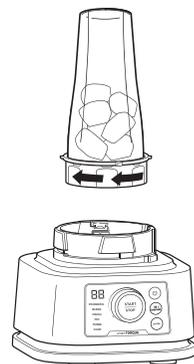


- 4 Turn the cup upside down and install on the motor base by aligning the tab on the cup with the slots on the base. Then, rotate cup clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.

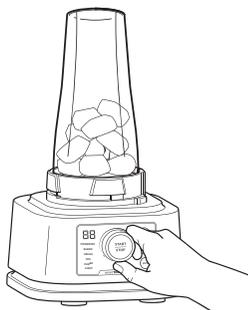

- 5a If using an Auto-iQ program, use the dial to select the program that best suits your desired output, then press START/STOP. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

- 5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

NOTE: Only speed 10 is available when using the Power Nutri™ Cup.

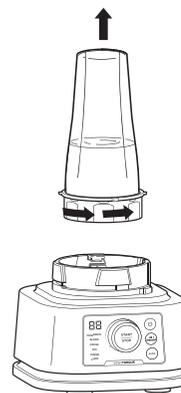

- 6 Remove the cup from the motor base by turning it anti-clockwise and then lifting up.



- 7 Remove the blade assembly by twisting anti-clockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the Spout Lid or Storage Lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



- 8 To enjoy on the go, place the Spout Lid or Storage Lid onto the cup and twist clockwise until firmly sealed.



- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING STUCK-ON INGREDIENTS


NOTE: For best results, use a dishwasher to remove stuck-on ingredients.

- 1 After processing, immediately clean the container and blade assembly under warm, soapy water.
- 2 Depending on the container, fill with washing-up liquid and water according to the following instructions:

Jug:

1 OR 2 SMALL DROPS OF WASHING-UP LIQUID

FILL WATER TO DOUGH MAX LINE

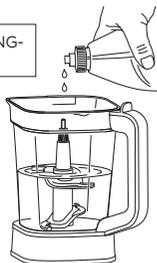

With the dough or stacked blade assembly installed, fill with warm water up to DOUGH MAX line and add 1 or 2 small drops washing-up liquid. Secure jug lid and ensure the pour spout is securely closed.

Power Nutri™ Bowl:

1 OR 2 SMALL DROPS OF WASHING-UP LIQUID

FILL WATER TO TOP OF POWER PADDLE



Fill with warm water up to top of Power Paddle and add 1 or 2 small drops washing-up liquid. Install blade assembly.

Power Nutri™ Cup:

1 SMALL DROP OF WASHING-UP LIQUID

FILL WATER HALFWAY



Fill halfway with warm water and add 1 small drop washing-up liquid. Install blade assembly.

- 3 Install the container on the motor base. Select MIX, then press START/STOP.

NOTE: If using the Power Nutri™ Bowl, twist the Power Paddle anti-clockwise *continuously* while cleaning.



- 4 Once program is complete, thoroughly rinse container and blade assembly under warm, soapy water. Use the included cleaning brush to remove any remaining residue.

CLEANING

Hand-Washing

Wash containers, lids and blade assemblies in warm, soapy water. Use a dishwashing utensil with handle to avoid direct contact with the blades. Use the included cleaning brush to remove excess residue, such as when dealing with stuck-on ingredients, like doughs and batters. Exercise care when handling the blade assembly as the blades are sharp. Thoroughly rinse and air-dry all parts.



NOTE: The Power Paddle in the Power Nutri™ Bowl is not removable.

Dishwasher

Containers, lids and blade assembly are dishwasher safe. Ensure the blade assembly and lid are removed from the container before placing in the dishwasher.

NOTE: For best results, use a dishwasher to remove stuck-on ingredients.

Motor Base

Unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads or brushes to clean the base.

STORING

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base. **DO NOT** wrap the cord around the bottom of the base for storage.

DO NOT store blended or unblended ingredients in the cup or bowl with the blade assembly attached.

DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the electrical socket.
- 2 Allow the unit to cool for approximately 15 minutes.
- 3 Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.co.uk

VISIT US ONLINE AT:

ninjakitchen.co.uk

Or follow us on any of our social media pages:



@ninjakitchenuk



NOTE: Save these instructions. Keep for future reference.



This marking indicates this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

Euro-Pro Europe Limited
3150 Century Way
Thorpe Park, Leeds
LS15 8ZB, UK
ninjakitchen.co.uk

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ, NINJA and TOTAL CRUSHING are registered trademarks of SharkNinja Operating LLC.
HYBRID EDGE and POWER NUTRI are trademarks of SharkNinja Operating LLC.

© 2020 SharkNinja Operating LLC

PRINTED IN CHINA

CB350UK_IB_MP_201210_Mv1

