 


33" Digital Tower Fan with DC Motor

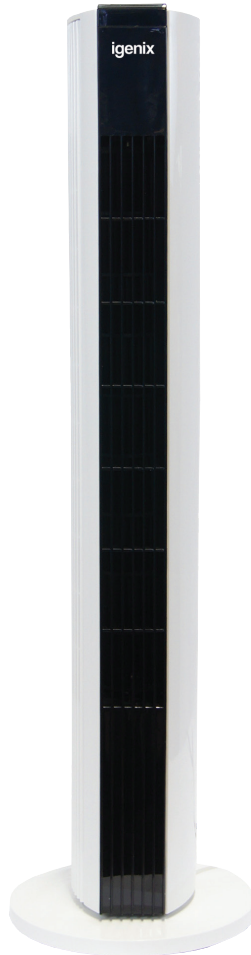

DF0039 / DF0039BL

Batch code:

Please read these instructions carefully before use and retain for future reference

**Before switching on your appliance,
always check for any damage which may have been caused in transit**

CONTENTS

Safety Instructions.....	2-3
Specifications.....	3
Appliance Overview.....	4
Installation.....	5
Operating Instructions.....	6
Cleaning & Storage.....	6
Fuse Replacement.....	7
Disposal information.....	7
Igenix Warranty.....	8-9

SAFETY INSTRUCTIONS

Please read this user manual carefully to ensure proper use, maintenance and installation.

1. This product is intended for domestic and light office use **ONLY** and not for commercial, industrial or outdoor use.
2. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. Return to an authorized service facility for examination and repair.
3. This unit should always be kept in an upright position to avoid any damage. Locate the unit on a flat stable surface.
4. Check the voltage of the appliance matches the household voltage, which is located on the rating label.
5. Ensure that the air inlets and outlets are not blocked or covered.
6. Do not place the unit too close to curtains or other objects - min 30cm.
7. Make sure there are no objects near the unit which can prevent it from oscillating.
8. Never insert fingers, pencils or other objects into the unit if the power cord is plugged in, and especially not during the operation. Warn your children against these dangers.
9. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction

 
concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

10. Keep the appliance and its cord out of reach of children aged less than 8 years.
11. Children shall not play with the appliance.
12. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Unplug the unit from the socket when you do not use it. Please do not pull on the cord.
14. Do not use the unit near bath, shower, swimming pool or anywhere it could be splashed with water.
15. Do not expose the unit to direct sunlight.
16. The fan should stand upright during operation and never lying on its side.
17. Do not use the unit near flammable or explosive gases.
18. Before cleaning the unit, switch it off and unplug the power cord.
19. Do not leave the unit unattended during operating. Always unplug the power cord when not in use.
20. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and void the warranty.


SPECIFICATIONS



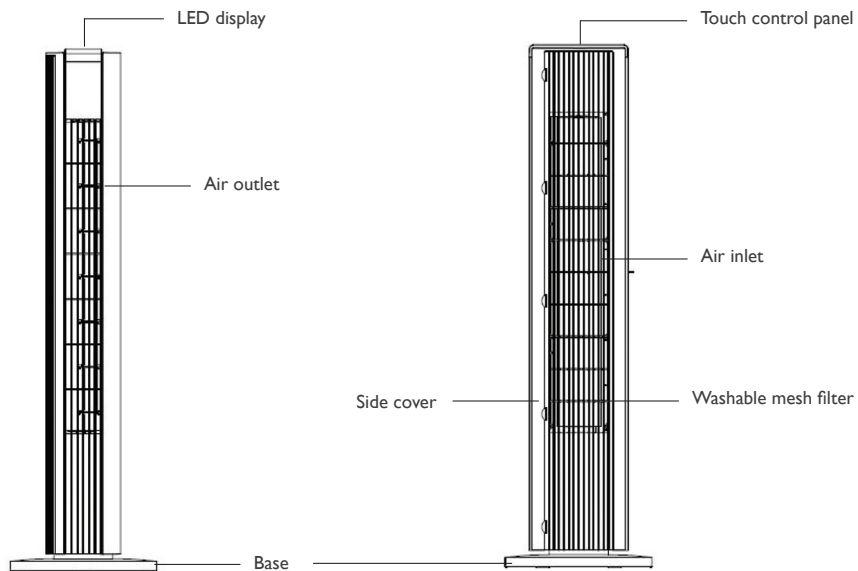


Model	DF0039/DF0039BL
Voltage	220-240 Volt
Frequency	50-60 Hz
Power	25 Watt

 APPLIANCE OVERVIEW

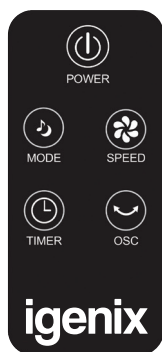


Control Panel and Remote control Symbols




	Oscillation Function
	Breeze Mode: Normal, Natural (♪) and Sleep (♪)
	Timer: up to 8 hours
	Speed setting: 1 - 8
	Power: On and off control

INSTALLATION

 
1. Unpack all the packaging material from the box.
2. Put the power cord through the base center (Fig1.)

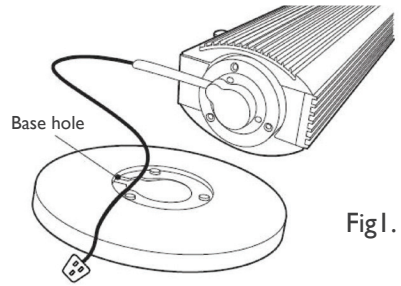

 3. Insert the base into the main body and tighten the screws with screw driver (Fig2.)

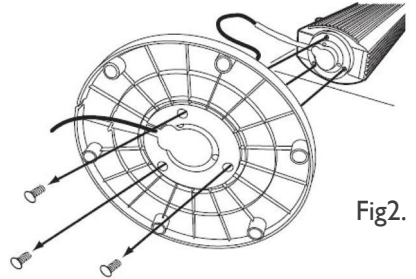


 4. Put the power cord into the notch (Fig3.)

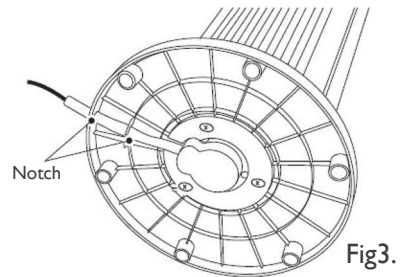

Battery Replacement

 Press the tab lock and slide the battery compartment open. Insert the new battery, and then gently push the battery compartment back into the remote control.

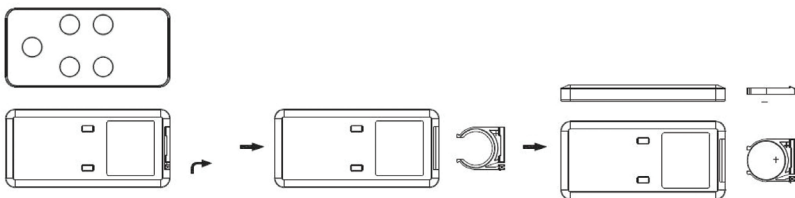

OPERATING INSTRUCTIONS

1. Insert the plug into a 220-240V~ 50-60Hz electrical power supply outlet.
2. Press the function keys on the Touch-control panel as below:
 - **POWER:** Turn the fan on by pressing the POWER key, press again to turn it off and the fan enters Standby mode. Unplug the power cord to turn off the fan completely.
 - **SPEED:** Adjust the fan speed to the desired level, there are 8 speeds. The LED indicator will change accordingly.
 - **MODE:** Press this key to set the fan mode: Normal, Natural and Sleep. The LED indicator will change accordingly, Natural (♪), Sleep (♫). (Normal mode has no LED indicator.)
 - **Natural Mode:** Fan speed will fluctuate automatically in a set time interval to simulate natural wind.
 - **Sleep Mode:** Fan speed will fluctuate automatically in a set time interval to provide a comfortable sleeping environment.
 - **Normal Mode:** The fan will work at a set speed.
 - **TIMER:** Press Timer key to set between 0.5 hour to 8 hours. The LED display will show the time being set. Then the fan will automatically shut off when the timer is over.
 - **OSC:** Press OSC key to turn on the oscillation function. Press again to turn off.
3. All functions performed with the remote work identically to the control panel.

 
CLEANING AND STORAGE

- Before cleaning the unit turn the power off by pressing the POWER button, wait a few minutes and then unplug the power cord from the plug socket.
- Clean the unit using a damp cloth moistened with a mild soap solution, and then wipe it using a dry cloth.
- Gently remove the Filter Cover, then remove the Air Filter.
- Rinse the Filter under running water and dry it with a soft cloth.
- Replace the Air Filter and Filter Cover.
- We recommend cleaning the unit once a month.
- If you don't use the unit for a long period of time, please turn the unit off, unplug the power cord from the socket and then store in a dry, cool and safe place.
- Do not expose the unit to direct sunlight.
- Remove the batteries from the remote control and keep them safe.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

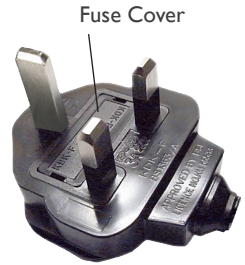

DISPOSAL INFORMATION



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code beginning '5' and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.