

Cooking Pot



Always install cooking pot before adding accessories or ingredients.

Assembling the Cook & Crisp™ Basket



1. Place diffuser on a flat surface.
2. Place basket on diffuser.
3. Press down firmly.

Helpful Hints

When following a recipe, **ALWAYS** use the exact amount of liquid, even when scaling down proteins or vegetables. Refer to the Recipe Guide for exact liquid measurements for beans, grains, starches and more.



When using Combi-Steam mode functions, always add liquid to the pot.



Any liquid can be used for pressure cooking. Use broths or sauces instead of water to infuse additional flavour.
Always use a minimum of 250ml of liquid. Depending on your recipe, you may need up to 750ml.




To convert oven recipes, use the Bake function and reduce the cook temperature by 10°C.



When switching from pressure cooking to crisping after pressure cooking, empty the pot of any remaining liquid for best crisping results.

Using the 2-Tier Reversible Rack

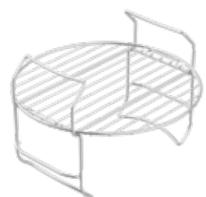

Reversible rack - Higher position
Grill chicken, steak, fish and more.




Reversible rack - lower position
Steam vegetables or use it to elevate baking tins for even air flow.



2-Tier Assembly
Increase capacity for complete COMBI-STEAM meals or to cook up to 8 chicken breasts or fish fillets at once.

Pressure cooking tips

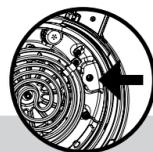

If the unit is not coming to pressure, check that the silicone ring is fully installed by pressing it into place all around the metal ring rack. Make sure the ring is completely clean and undamaged.



The time to build pressure will vary based on selected pressure, temp of the pot and temp and quantity of the ingredients (up to 20 minutes or more). Frozen and/or large amounts of ingredients will increase the time to pressure significantly (45 minutes or more).




Assembling the 2-Tier Reversible Rack



1. Place the Reversible Rack in the pot in the lower position.

Note: For easier cleaning, coat the rack with cooking spray before placing ingredients on it.

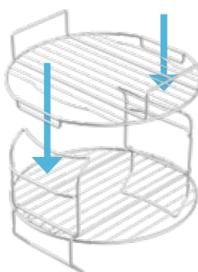

2. Drop the top layer through reversible rack handles.

Note: Place ingredients on the lower layer before adding the top layer. Make sure the top layer's handles are facing up when you slide it over the bottom layer.



3. The top layer will fit securely into handle slots.

The unit has the option to release pressure automatically and HANDS-FREE after pressure cooking is complete

The unit defaults to NATURAL RELEASE unless another pressure-release selection is made. Release pressure at any time by pressing and holding the RELEASE PRESSURE button. Turn valve to SEAL.



Natural

Natural release: The unit will naturally depressurise when the cook time ends. The heat will turn off but the food inside will continue to cook with the residual steam. This is used for large or delicate foods and any starchy ingredients.



Quick

Quick release is used for smaller foods or ingredients that are sensitive to overcooking. **DO NOT** quick release pressure when cooking starchy or foamy foods. To quick release, use the dial to select this option.



Delayed

Delayed Release: Set delayed release for recipes that require more time at pressure once the cook time has ended. If selected, the default time will be 10 minutes, adjust the time by selecting RELEASE PRESSURE button and then by using the up and down arrows. The unit will then quick release pressure. This is especially useful for rice and grains.

NOTE: Steam exits from the top of the Pressure Release Valve. **DO NOT** reach over the valve.

Please make sure to read the enclosed Ninja® Instructions prior to using your unit.

NINJA
Foodi
MAX
SmartLid
Multi-Cooker

Lifting the lid and using the SmartLid Slider™

Move the slider from left to right to unlock 3 modes and 15 cooking functions

Opening & closing the lid

Always use the lift tab to open the lid pointing away from you and to close the lid to keep your hand away from hot steam and convection heat.



THIS IS NOT A HANDLE. Opening the lid from the side may result in serious burns.

Pressure Mode

Pressure to lock in juices.
Best for tenderising large meats and cooking soups and stews.



With SmartSlider™ in position 2 or 3, add ingredients.



Move Slider left to position 1 (PRESSURE)
Lid remains locked

Combi-Steam Mode

Simultaneous steam and convection cooking for faster, juicier, crispy results.

Best for roasts, fresh & frozen proteins, root vegetables and complete meals.



Keep lid closed to allow steam and convection heat to work together. Open lid only if recipe calls for it.

Air Fry & Hob Mode

Convection and hob cooking.

Great for everything else, refer to the recipe guide for more info.



Lid can be opened any time to check on food.

Using the control panel



A SMARTLID SLIDER™: There are 3 positions to the SmartLid Slider™. Each position controls a different set of functions.

- 1 PRESSURE**
- 2 COMBI-STEAM MODE**
- 3 AIR FRY/HOB**

B RELEASE PRESSURE button: Use to quickly release pressure or program Delayed Release settings. This will illuminate only after Pressure function begins.

C Left arrows: Use the up and down arrows to the left of the display to adjust the cook temperature or outcome when using the digital cooking probe.

D Right arrows: Use the up and down arrows to the right of the display to adjust the cook time or food type when using the probe.

E PRESET button: Choose the option of using the digital cooking probe to cook meat or fish exactly as you like it.

F MANUAL button: Switches the display screen so you can manually set the internal outcome when using the probe.

G START/STOP button: Press to start cooking. Pressing this button while the unit is cooking will stop the current function.

H KEEP WARM: After pressure cooking, steaming or slow cooking, the unit will automatically switch to KEEP WARM mode and start counting up. KEEP WARM will stay on for 12 hours. You may press the KEEP WARM button or the START/STOP button to turn it off.

I Dial: As soon as the SmartLid Slider™ is in 1 of the 3 available positions, the available functions will illuminate. Use the dial to select one of the available functions.

J Power button: The power button turns the unit on and off and stops all cooking functions.

Using the Multi-Cooker functions

When can I open the lid?

1 Pressure Mode

See back page for selecting hands-free steam release. "PrE ---" will display while pressure builds, then the timer will start counting down.



1. Place ingredients on the required accessory or in the pot. Add liquid according to recipe.



2. Close lid. Move slider to the PRESSURE position to lock lid. *Slider will move only when lid is closed.*



3. Unit will default to NATURAL RELEASE. If desired, use dial to select QUICK RELEASE or DELAYED RELEASE.



4. Turn pressure release valve to SEAL.



5. Set temperature (HI or LO) and time. Press START/STOP.



6. "PrE" and progress bars indicate pressure is building. When unit comes to pressure, cook time will start counting down.



7. When cooking is complete, unit will beep and pressure will release automatically if set to QUICK or DELAYED. Unit will then switch to Keep Warm and count up. *Press the Release Pressure button to release pressure manually.*



8. You may open lid as soon as "OPN Lid" appears on the display.



Lid remains locked during cooking.

2 Combi-Steam Mode

"PrE ---" will display while steam builds, then the timer will start counting down for convection cooking.



1. Add the required water or stock specified by the recipe.



2. Place ingredients on the required accessory.



3. Close lid and move slider to the Combi-Steam mode position. Turn dial to select a function.



4. Turn pressure release valve on lid to SEAL or VENT (the position does not matter in this mode).



5. Set temperature and time for convection cooking. Steam temperature and time are auto-detected and don't need to be set. Press START/STOP.



6. "PrE" and progress bars indicate unit is coming to steam temp. When unit switches to convection cooking, timer will start counting down.



Keep lid closed to allow steam and convection heat to work together. Open lid only if recipe calls for it, as cooking will pause when lid is open, and this could impact results.

3 Air Fry & Hob Mode

Cooking will start when you press START/STOP.



1. Place ingredients on the required accessory or in the pot.



2. Close the lid and move slider to the right (AIR FRY/HOB). Turn dial to select a function.



3. Turn pressure release valve on lid to SEAL or VENT (the position does not matter in this mode).



4. Set temperature and time. Press START/STOP.



5. Open lid to pause Air Fry, Bake, Grill, or Prove. Close lid to resume.



Lid can be opened at any time to check on food.

NOTE: Cooking will automatically pause when lid is open.

Sear/Sauté



Brown meats, sauté vegetables and simmer sauces.

Steam



Gently cook delicate foods at a high temperature. Reversible Rack in lower position

Slow Cook



Cook at a lower temperature for longer periods of time.

Yogurt



Make homemade yogurt.

Air Fry



Give foods crispiness and crunch with little to no oil. Cook & Crisp™ Basket Shake basket or toss with silicone-tipped tongs for even browning.

Bake



Prepare oven-tender meats, baked treats and more. Reversible Rack in lower position or Cook & Crisp™ Basket

Grill



Cook at high heat to caramelize and brown foods. Reversible Rack in higher position

Dehydrate



Dehydrate meats, fruits and vegetables. Reversible Rack with top layer installed

Prove



Create an environment for dough to rest and rise. Cook & Crisp™ Basket